


## KEYPAD SETTINGS

English

V2.0

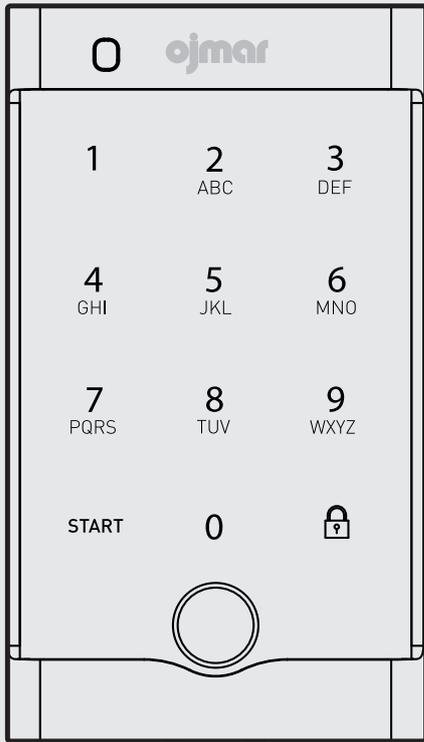

### CONFIGURE KEYPAD LOCK.

With this function activated, in a closed lock, when three incorrect opening codes are entered the lock will stop working for 30 seconds.

### TO ACTIVATE KEYPAD LOCK.

**"START"+MASTER CODE+22 + LOCK**

### TO DEACTIVATE KEYPAD LOCK.

**"START"+MASTER CODE+33 + LOCK**

### CONFIGURE USER CODE LENGTH.

The user code can be configured with a length of 4 digits, 5 digits, or 6 digits.

When the length is configured in private mode, the code changes to 000000 by default

To configure the code to 4 digits:

**"START"+MASTER CODE+44 + LOCK**

To configure the code to 5 digits:

**"START"+MASTER CODE+55 + LOCK**

To configure the code to 6 digits:

**"START"+MASTER CODE+66 + LOCK**

### RESET TO FACTORY SETTINGS - LEAVES THE FACTORY SETTINGS ONLY

**DISTRIBUTION.** In open or closed lock. On initializing (removing and inserting a battery) and before 3 seconds press

**"START"+987654321+73 + LOCK**

### LOW BATTERY.

When the battery runs out a red Led will light up when "start" is pressed. The lock will allow opening but will not allowing closing any more until the batteries are changed.

The lock is configured with the following factory settings:

1/2

#### PUBLIC MODE:

- Master number 000000.
- 4 digits.
- Led activated in closed.
- Active buzzer.
- Keypad lock deactivated.
- Not rented.

The lock has to be in the open position to make any changes to its settings.

#### CHANGE MASTER CODE.

**IMPORTANT, change the default master code for your safety.**

To change the master code

**"START"+MASTER CODE+NEW MASTER CODE+77 + LOCK**

#### SWITCH PUBLIC AND PRIVATE MODE.

##### Private mode.

In this mode the user must enter the same code each time he/she wants to open and close the lock.

To switch to private mode:

**"START"+MASTER CODE+00 + LOCK**

By default the user code will be 0000. To change the user code:

**"START"+MASTER CODE+NEW USER CODE + LOCK**

The code can be changed with the lock closed and open

##### Public mode.

In this mode the user enters any code to close the lock

To switch to public mode:

**"START"+MASTER CODE+11 + LOCK**

#### CONFIGURE LED FLASHING IN CLOSED.

The Led flashing in closed alerts when the locker is occupied.

To deactivate the Led in closed:

**"START"+MASTER CODE+95 + LOCK**

To activate the Led in closed:

**"START"+MASTER CODE+85 + LOCK**

#### CONFIGURE BUZZER.

Each time a key is pressed the lock emits a sound.

To deactivate the buzzer:

**"START"+MASTER CODE+25 + LOCK**

To activate the buzzer:

**"START"+MASTER CODE+15 + LOCK**